

POWER MOLLER® 24!

SERIES PM486/500/570/605FE • GE 【Brushless DC Motorised Roller】 HANDLING INSTRUCTIONS

※ Motor driver card is NOT enclosed. It is separately supplied.

We thank you for your purchase of our Power Moller.

Please read this handling instructions first to understand the product, safety information and cautions before using the product. Keep the handling instructions at certain place, to be ready whenever needed.


Make sure whether the product you received complies to your purchase order, with its designation, specifications and operating voltage.

To use the product properly and safely

- Do not use the product in explosive, ignitable gas, corrosive, watery (except waterproof, dripproof unit) environment, or around flammable products.
- Switch off the power, when conveyor removal, wiring or maintenance is done, otherwise you have a risk of electrical shock or injury.
- Respect the electrical regulations of the site or the equipment, where the product is installed. (Labour safety and sanitary regulations, electrical equipment technical standard, etc)
- Make sure the conveyor is grounded.
- Also make sure the Power Moller's shafts are tightly fixed using the standard mounting brackets supplied together, before operating the unit.
- Do not injure, pull, twist, nip nor additionally process the power cable.

Confirmation of the product


- ① Make sure you received the right product by checking the model number written on the circular label put on the roller's end-housing of the power cable side. Also make sure one (1) set of right Mounting Bracket is enclosed, referring to the drawings below.

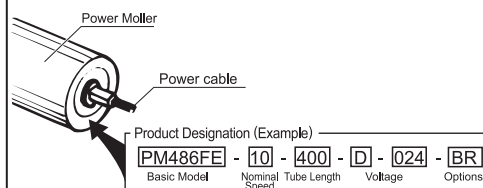

Power Source

- 24VDC Battery, or 24VDC Power Supply
- Battery or fullwave rectified and smoothed current <10% Ripple




Standard (Hex.shaft)

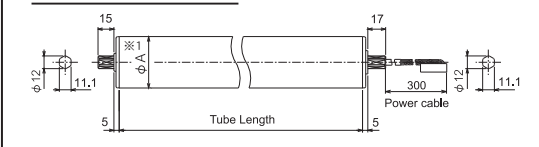

※ 1 Roller diameter

Model	PM486 SERIES	PM500 SERIES	PM570 SERIES	PM605 SERIES
Diameter ϕA (mm)	$\phi 48.6$	$\phi 50.0$	$\phi 57.0$	$\phi 60.5$

Mounting bracket

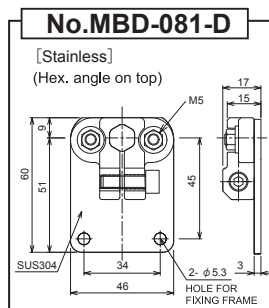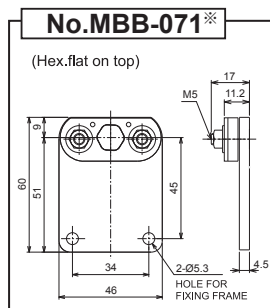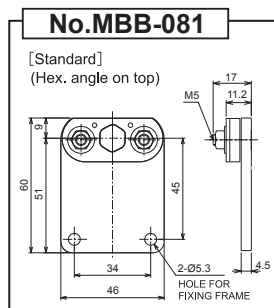

※ Specify clearly the bracket number if non-standard bracket is required.


Installation

⚠ CAUTION

Unit's shaft must be fixed to the conveyor frame with Mounting bracket supplied with the unit. Rattling or idle rotation of the shaft may break the power cable, causing disconnection, by which the Power Moller will cease functioning.


⚠ CAUTION

Make sure conveyor frame is grounded properly.

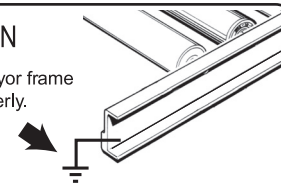

1


Make screw holes to mount the mounting bracket on the conveyor frame where power cable goes through per illustrated below.

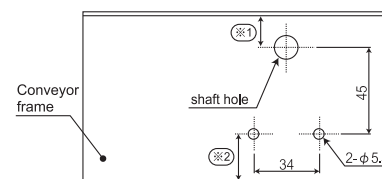

- ※ 1: space ≥ 9 mm must be kept
- ※ 2: space ≥ 6 mm must be kept

2


Insert the unit's shaft with power cable through the conveyor frame shaft hole, taking attention not to injure the cable. Then, press the spring loaded shaft and insert it to the other side of conveyor frame shaft hole.

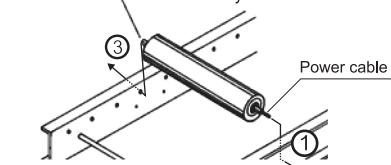

Care must be paid not to damage the power cable


3

Install the Mounting Bracket to the conveyor frame per illustrated below to stationary hold the Power Moller's shaft. Care must be paid not to damage the power cable or its connector.

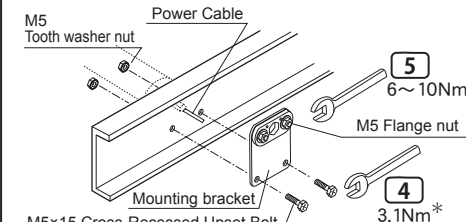


* If case of using a Phillips screwdriver, the required torque is 3.5N·m.

- Conveyor's between frame dimension must leave 2 to 5mm gap when the Power Moller is mounted into the conveyor frame.
- The shaft must be held stationary by three stack of metallic piece as illustrated above.

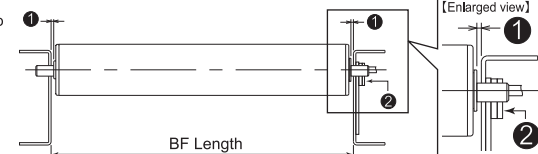

MBD type

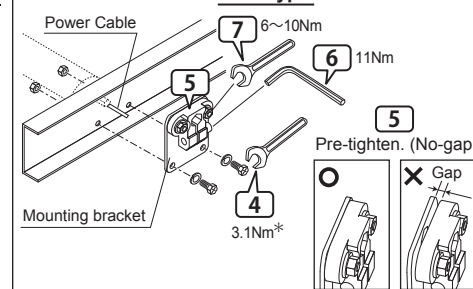

Itoh Denki Co.,Ltd.

Global Headquarters

■ ITOH DENKI CO., LTD.

1146-2, Asazuma-cho, Kasai, Hyogo 679-0105 Japan
Tel: +81 790 47 0955 Fax: +81 790 47 1325

Europe, Middle East, Africa

■ ITOH DENKI EUROPE SAS

490, Avenue des Jourdiés -P.A.E. les Jourdiés
74800 Saint Pierre en Faucigny, France
Tel: +33 4 50 03 09 99 Fax: +33 4 50 03 07 60

<https://www.itohdenki.co.jp>

North & South Americas

■ ITOH DENKI USA, INC

2 Great Valley Blvd., Wilkes-Barre, PA 18706-5332 U.S.A.
Tel: +1 570 820 8811 Fax: +1 570 820 8838

Mainland China

■ ITOH DENKI SHANGHAI CO., LTD.

Room 1812, No.689, Guangdong Rd., Huangpu district, Shanghai 200001, P.R. China
Tel: +86 21 6341 0181 Fax: +86 21 6341 0180

Specifications are subject to change without prior notice.